

更改密碼 NX

- 1 先按 (*)-(5)
- 2 輸入4位主密碼 (x)-(x)-(x)-(x)
- 3 如輸入正確 "Ready"便會閃亮着.
- 4 輸入新加/更改密碼組合 01代表主密碼 可以開/關系統及更改密碼
02-99代長次碼 止可以開/關系統
- 5 輸入新4位主密碼/次碼 (x)-(x)-(x)-(x)
- 6 最後按(#)擊完成

POWER Light is "on" when AC power is present; flashes to indicate a low battery condition.

READY Light is "on" when the system is ready to arm, flashes if ready to "force arm".

SERVICE Light is "on" to indicate a trouble condition with your system.


ARMED Light is "on" when armed, "off" when disarmed; flashes to indicate a previous alarm.

INSTANT Light is "on" when there is no entry/exit delay.

FIRE Light is "on" to indicate fire alarm; flashes to indicate a trouble condition with your fire system.

PULL OUT ZONE ID TAB

ZONE LIGHTS are "on" steady to indicate bypass; slow flash for zone fault; rapid flash for service condition.

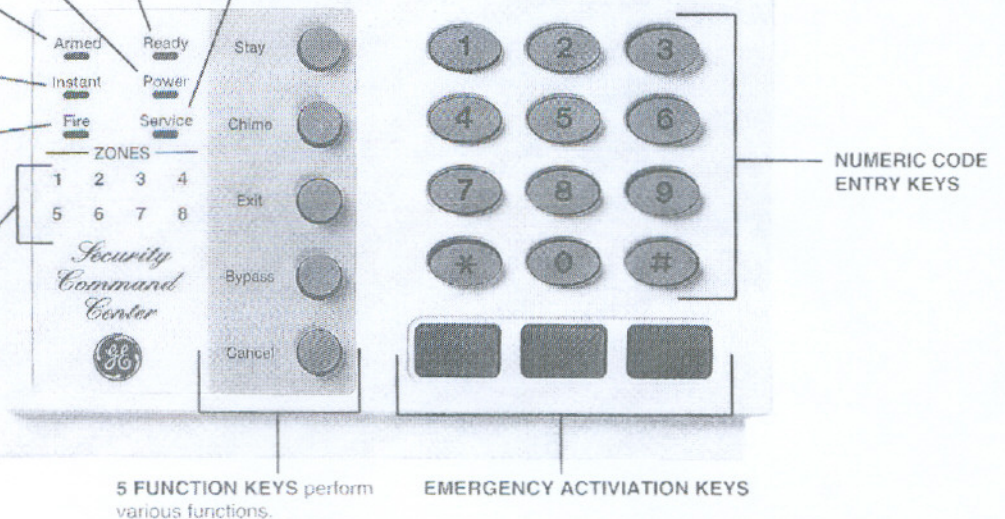

NOTE: Some of the features described above may or may not be available for your system. Check with your installation company to find out how your system is programmed.